

 
 
FLOWSTOP

USER MANUAL

Your equipment

FlowStop

1. Handle
2. Top cushion
3. Bottom cushion
4. Instruction
5. Two bands height marks
6. Two valves
7. QR code

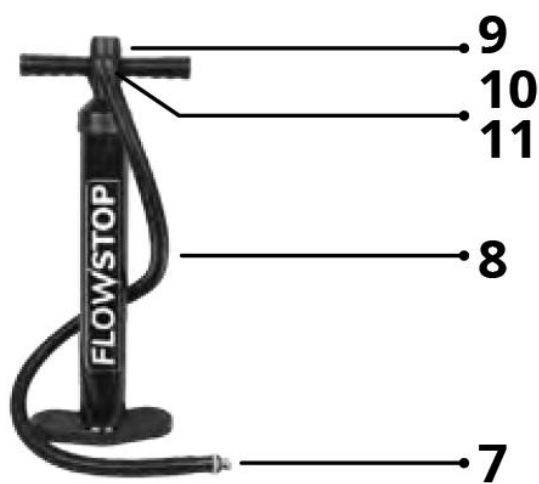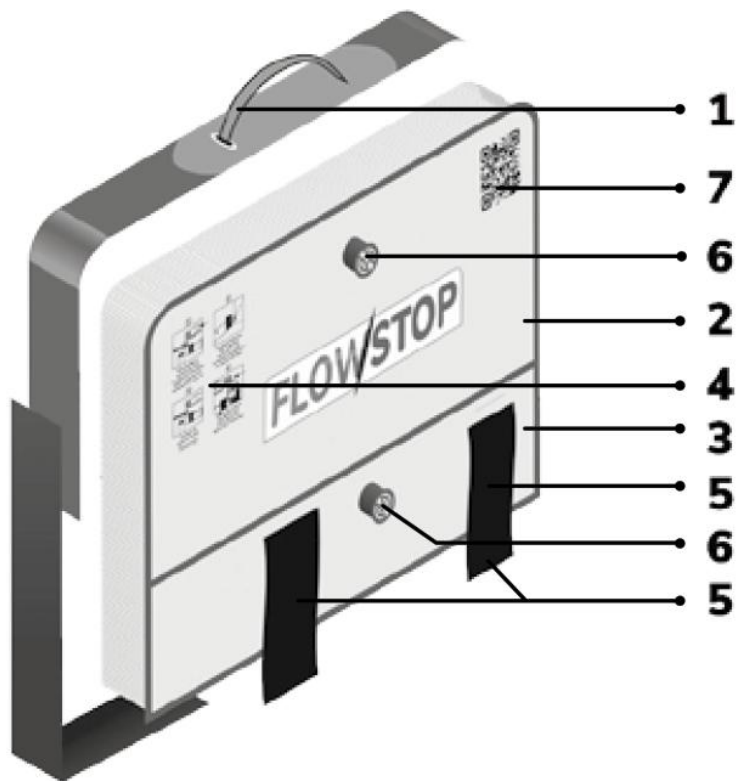

Pump

8. Inflation device
9. Pipe
10. Pressure gauge
11. "To inflate" output INF
12. "To deflate" DEF outlet

Pump installation

Step 1: Connect the Hose

- On the height of the pump tube there are two orifices INF for Inflate (to inflate your device) and DEF for Deflate (to deflate your device).
- On the INF outlet, connect the hose.

Step 2: Activate the Pump

- At the top of the pump tube there is a cap that will allow you to gauge your efforts during inflation. While it's in place, you're getting as much air into your FlowStop by pulling as by pushing.
- When the double action is too difficult, you can remove the cap so you will only put air in by pushing.



Video tutorial

- > Go to: **www.flowstop/installation**
- > Tutorial: How to install a Flowstop?

The instructions




Beyond 1.50 cm in width, it is recommended to carry out the installation with two people.

Step 1: Pre-inflate the top cushion



We recommend inflating the FlowStop empty for the first use.

 
- First, press the central piston of the upper cushion valve so that it is in the high position.
- Screw on the pump pipe.
- Inflate enough to shape the cushion so that it can be put in place more easily.

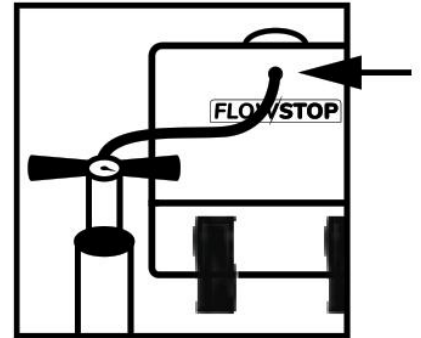

Pre-inflate the top cushion

Step 2: Position the Flowstop

 - Install your pre-inflated cushion in the opening to be protected.
- Once installed, make sure the cushion is correctly positioned using the two height marker strips.
- The bottom of the marker strips must touch the floor exactly.

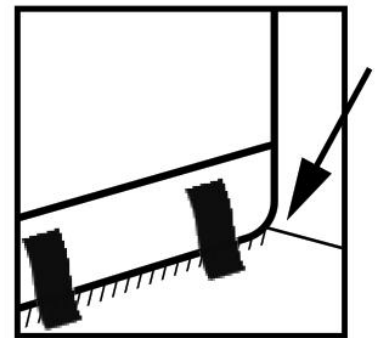

Position the Flowstop in the opening and finish inflating the top cushion.



 
Be careful when placing it in your opening do not hesitate to force to make it fit.

Step 3: Finish inflating the top cushion

- Using the pump, completely inflate the upper cushion (recommended minimum pressure 0.8 Bar). To make sure, you will find a pressure gauge on the top of your pump.
- Once the upper cushion is inflated, unscrew the hose and close using the protective cap.

Step 4:

- As with the upper cushion, remember to press down on the central piston of the valve before inflating so that it pops out.
- Screw on the hose and inflate the lower cushion, which will come up against the ground to provide a maximum seal.
- Once the lower cushion is inflated, unscrew the hose and close with the protective cap.

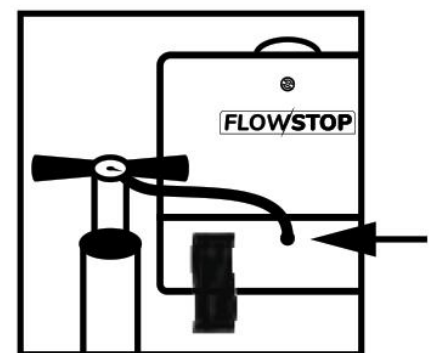

Inflate the bottom cushion



Video tutorial

- > Go to: **www.flowstop/installation**
- > Tutorial: How to install a Flowstop?

Once the flood has passed

Step 1: Deflate the top cushion

- First, remove the protective cap.
- Continuously press the valve until the cushion is sufficiently deflated.

Step 2: Deflate the bottom cushion

- Repeat **step 1** for the lower cushion.

Step 3: Clean the FlowStop

- You can clean the FlowStop using



You can use the pump to optimally deflate your FlowStop. For this a, connect the hose to the DEF mode of your pump.



Video tutorial

- > Go to: **www.flowstop/installation**
- > Tutorial: How to install a Flowstop?

Step 4: Store your FlowStop in a dry place

Our FlowStop tracking service



This service is not mandatory, but allows you to prove to your insurer that you have correctly installed your FlowStop in the event of flooding.

Step 1: Add my FlowStop

From your smartphone browser, go to **app.flowstop.co** or directly via this QR Code:

- Take a photo of the QR Code on your FlowStop
- Indicate its location
- Geolocate it!



The rest on the back



 


Step 2: In case of flooding

- Open your app to the camera.
- Scan the QR Code on your FlowStop.
- Confirm the installation of your device.
- Take a photo of the device in place.



*Anyone can carry out this action ;)
Neighbor, friend, etc.*

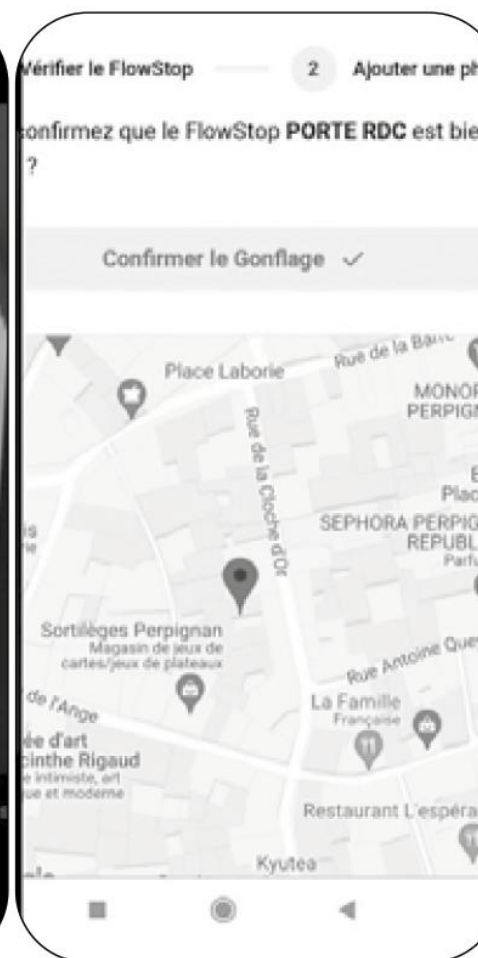

Share your experience on
www.flowstop.mt