

## USER MANUAL CASA DIFFUSER

### DESCRIPTION

Dimensions: 75\*123 mm  
Weight: 320 gr  
Coverage: 100 m<sup>2</sup>  
Power: 1.7W  
Input voltage: USB 5V  
Lithium battery: 2000 mAh  
Consumption: 0.02-0.10 ml/h  
Refill: 15 ml  
Materials: ABS+PP



CASA



USB CABLE




MANUAL

### CONCENTRATION & CONSUMPTION

Grade	Working(s)	Stop(s)	Consumption (ml/h)
G3	10 s	60 s	0.1 ml/h
G2	10 s	120 s	0.05 ml/h
G1	5 s	150 s	0.03 ml/h
User	5-15 s	60-900 s	

Notes: It is normal for consumption rates to fluctuate by 15%. The above data is based on tests. Consumption rate of different essential oils varies, above data is for reference only.

### PRODUCT DESCRIPTION

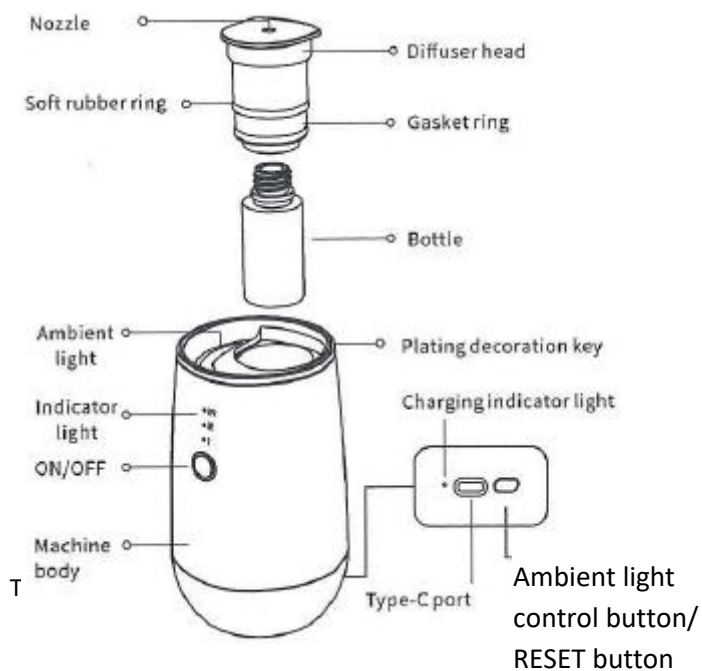

### USER GUIDE



1.Take out the diffuser head




2.Turn the bottle counterclockwise



3.Press down the diffuser head



4.Long press to switch the machine

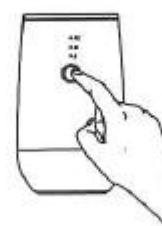

5.Click to change the grades



6.Short click to switch the light color/long click to do RESET for the password

## FUNCTION DESCRIPTION

### Charging mode:

When charging, the indicator light is always red, and when fully charged, the green light is always on. It refers to the charging indicator on the back.

### Auto power off:

When there is no operation, the device will automatically power off after 12 hours.

### Ambient light:

Total of 7 light colors: red, yellow, green, cyan, blue, purple, white.

### Diffuser head:

Applied to most 5/10/15 ml refills in the market.

### Buttons:

On/Off button: long press to switch the machine, short press to change grades.

### Ambient light button:

- Press to change the light color or turn off the light.
- Long press and hold for 3 seconds to restore default password. All settings will be restored to factory default setting.

### Buzzer:

You will hear a beep, when it is connected to Bluetooth, the settings are saved, and the button operations is activated.

## WARNING

1. Always keep the machine vertical. Tilt or lie flatly may cause an overflow of liquid. The machine efficiency may be affected.
2. Do not modify, disassemble or repair the machine yourself. If any failure happens, please contact our technical personnel.  
Do not put the machine in a hot or humid place to avoid damage, and do not store above 60°C.
3. Do NOT use quick charger for device.
4. If the battery is fully charged, it can standby for 2 months with the power off and it needs to be recharged after that delay.



## REPAIRING


Before asking to have the machine repaired, please try to diagnose the problem following below instructions:

BREAKDOWN	SOLUTIONS
Does not diffuse anymore	<ul style="list-style-type: none"><li>- The atomizing core may be blocked, please clean the impurities inside with alcohol or replace it.</li><li>- Check if the machine is on "non working time".</li><li>- Air pump may be damaged, if so please replace it.</li><li>- Check if the tube is loose. If so please tighten it.</li></ul>
Low diffusion	<ul style="list-style-type: none"><li>- The atomizing core may be blocked, please clean the impurities inside with alcohol or replace it.</li><li>- Check whether or not the gasket is damaged/loose.</li><li>- Check whether the tube is loose or not. If so please tighten it.</li></ul>
Leak of liquid	<ul style="list-style-type: none"><li>- Check whether the bottle is loose or not.</li><li>- The gasket in the atomized head is damaged or loose. If so please tighten it or replace it.</li></ul>
Liquid sprinkle	<ul style="list-style-type: none"><li>- The atomized head is damaged, please replace it.</li><li>- The machine is tilted or lie flat, please keep it vertical.</li></ul>
Abnormal noise	<ul style="list-style-type: none"><li>- The air pump is loose, please retighten it.</li><li>- The air pump is damaged, please replace it.</li></ul>


## NSTRUCTIONS

### Where to get the APP:

Please search “**scent marketing**” on Google Play or App Store. You must activate the Bluetooth and geolocation functions on your phone for the app to work.

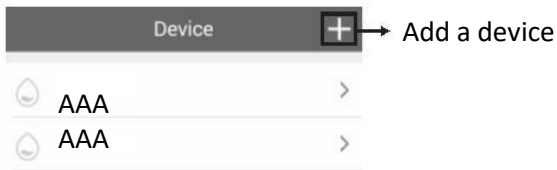

Select “SETTING”

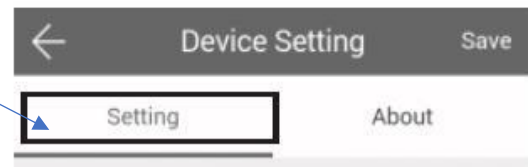 


Change the diffuser name

Name  
AAA

Notes: location

 Label  
AAAAAA

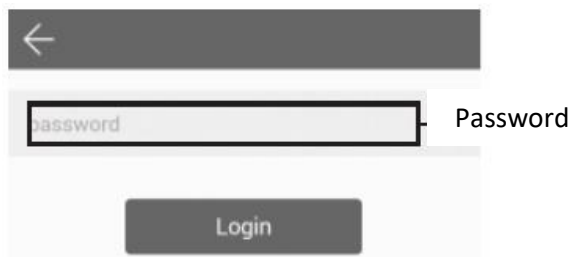

Password

Delete a working period



Add a working period



07:00-21:00 Grade: 09  
Mon Tue Wed Thur Fri Sat Sun



Timer

(PS :There are 5 working periods available)




After selecting the grade,  
**ALWAYS SAVE** before going back  
to the CASA page.



### MODIFY THE PASSWORD



 Click on  
“change  
password”

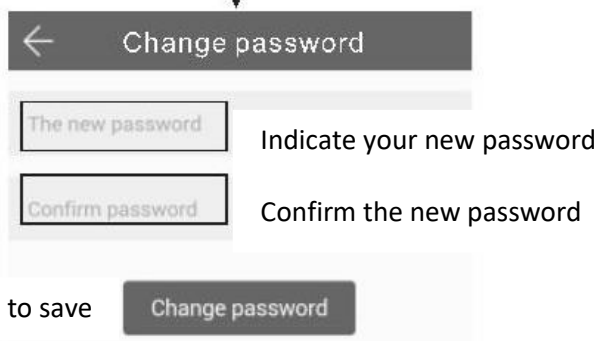


Indicate your new password

Confirm the new password

Click here to save

### Settings of the working periods

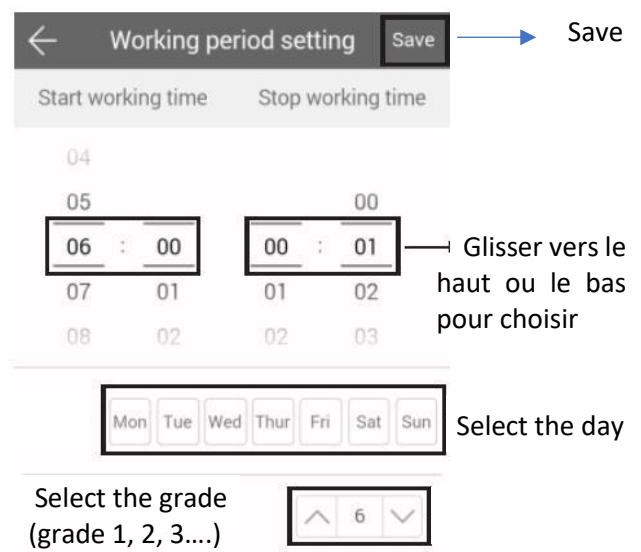 

Glisser vers le  
haut ou le bas  
pour choisir

Select the day

*If you forget the password, please press  
the reset button to restore the factory  
settings. The factory settings password is 888.*